
















CHARGE TIMES

	 GUIDE 10 PLUS	 FLIP 12	 SHERPA 15	 FLIP 24	 FLIP 36	 VENTURE 30	 SHERPA 40	 VENTURE 70	 SHERPA 100PD (VIA USB-C)	 SHERPA 100AC (VIA USB-C)
 USB PORT/ WALL OUTLET	6-10 HOURS	3 HOURS	2.5 HOURS	4 HOURS	5 HOURS	5 HOURS	7.5 HOURS	8 HOURS	3 HOURS	3 HOURS
 NOMAD 5	6 HOURS	4 HOURS	5 HOURS	8 HOURS	12 HOURS	9 HOURS	13 HOURS	—	—	—
 NOMAD 10	6 HOURS	3-6 HOURS	2.5 HOURS	4 HOURS	6 HOURS	5 HOURS	7.5 HOURS	11 HOURS	—	—
 NOMAD 20	6 HOURS	3 HOURS	2.5 HOURS	4 HOURS	5 HOURS	5 HOURS	7.5 HOURS	8 HOURS	9 HOURS	8-10 HOURS
 NOMAD 50	6 HOURS	3 HOURS	2.5 HOURS	4 HOURS	5 HOURS	5 HOURS	7.5 HOURS	8 HOURS	9 HOURS	3 HOURS